


ceiling pull - FLSY 2210




bulb + 1
bulb - 9
n/o 3
com 4

MIM 8118 transformer

1 2

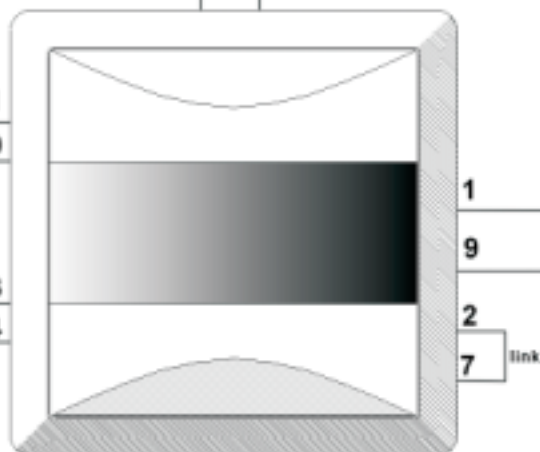


5 6 room indicator FLSY 2205

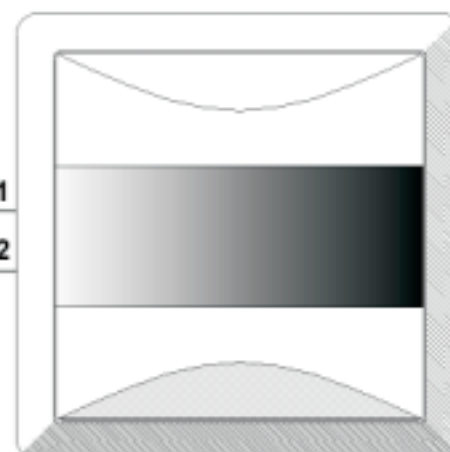

repeat indicator FLSY 2206

1 2

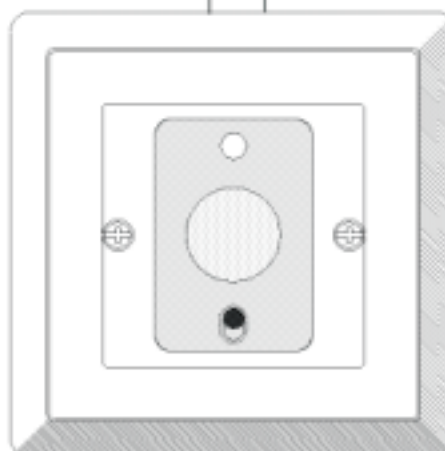

reset unit 20-102

Installation Checklist

1. make sure resistor-diode in ceiling pull across n/o & com. connect diode to n/o and resistor to com
2. make sure link 2-7 is installed in room indicator
3. observe polarities
4. check J1 jumper in FLSY 2205 is in 'ON' position

Mounting Requirements

1. Ceiling Pull - FLSY 2210 - surface mounted - besa or similar
2. Room Indicator - FLSY 2205 - surface mounted - besa or similar.
3. Reset Unit - 20-102 - flush mounted. single 35mm backbox required.

Cabling Requirements

DTA 2 System = 4 x 0.5mm²

For additional repeater light
up to 100m = 2 x 0.5mm²
over 100m = 2 x 1.0mm²